

OWNER'S GUIDE

**A simple setup.
A more informed
coin check.**



**OMEGA ARIS
CRICKET 660B**

Pingcoin + StackerTools | Phone, tablet + computer

Phone screen is illustrative.

START HERE

Choose one device. Set up one app.

You do not need to install both apps at once. Begin with the device and app you want to use today.

Android phone or tablet

Pingcoin p. 4 | StackerTools p. 6

iPhone or iPad

Pingcoin p. 5 | StackerTools p. 7

Windows, Mac or Linux

Use your web browser - p. 9

Before you begin: connect to Wi-Fi or cellular Internet, charge your device and have your Google or Apple account ready for the app store.

Then follow microphone guidance (p. 3), testing steps (p. 8) and Omega setup (pp. 10-12). Check offline use before travelling (p. 13).

LET THE APP LISTEN

Allow microphone access.

The app uses your microphone to hear the coin. When it asks for permission, choose the option that allows access.

Android example - illustrated example

Your coin-testing app needs the microphone

While using the app

iPhone / iPad example - illustrated example

Your coin-testing app needs the microphone

Allow

Messages and settings labels vary by device and software version. These drawings show the choice to look for; they are not exact app screens.

Already chose "Don't allow"?

Open device Settings, find the app and enable its microphone permission. For a browser, check that website's microphone permission and the selected microphone. Reload the page if needed.

ANDROID PHONE + TABLET

Pingcoin installation

1 Find the app

Open **Google Play**. Search for **Pingcoin - Coin Ping Test**. Check the developer: **Pingcoin**.

2 Install, then open

Tap **Install**. Sign in to Google Play if asked. When installation finishes, open the app.

3 Check access before paying

Start with the free tests offered in your app. If you need more, review the price and renewal terms before buying. Offers can differ between Apple and Android.

Next: allow the microphone (p. 3), then follow the testing steps on p. 8. See app screen examples on p. 16.



Official Google Play listing

Scan with your phone camera, or use the official links in the online guide.

Pingcoin FAQ states Android 5.0+. Install only if Google Play offers the app for your device. Store requirements can change. Customers download and pay for their own software.

IPHONE + IPAD

Pingcoin installation

1 Find the app

Open **App Store**. Search for **Pingcoin: Gold & Silver Tester**. Check the developer: **Jesse Szepieniec**.

2 Install, then open

Tap **Get**. Confirm with your normal Face ID, Touch ID or Apple Account prompt. When installation finishes, open the app.

3 Check access before paying

Start with the free tests offered in your app. If you need more, review the price and renewal terms before buying. Offers can differ between Apple and Android.

Next: allow the microphone (p. 3), then follow the testing steps on p. 8. See app screen examples on p. 17.



Official App Store listing

Scan with your phone camera, or use the official links in the online guide.

iOS / iPadOS 15.0+. Store requirements can change. Customers download and pay for their own software.

ANDROID PHONE + TABLET

StackerTools installation

1 Find the app

Open **Google Play**. Search for **StackerTools App**. Check the developer: **SoundMoneyMetals**.

2 Install, then open

Tap **Install**. Sign in to Google Play if asked. When installation finishes, open the app.

3 Resolve access

The app is free to download. Full access may need a developer-issued code or purchase. Check current options at **soundmoneymetals.us**. Omega ownership does not include a StackerTools license.

Next: allow the microphone (p. 3), then follow the testing steps on p. 8. See app screen examples on p. 18.



Official Google Play listing

Scan with your phone camera, or use the official links in the online guide.

Install only if Google Play offers the app for your device. Store requirements can change. Customers download and pay for their own software.

IPHONE + IPAD

StackerTools installation

1 Find the app

Open **App Store**. Search for **StackerTools App**.
Check the developer: **SoundMoneyMetals**.

2 Install, then open

Tap **Get**. Confirm with your normal Face ID, Touch ID or Apple Account prompt. When installation finishes, open the app.

3 Resolve access

The app is free to download. Full access may need a developer-issued code or purchase. Check current options at **soundmoneymetals.us**. Omega ownership does not include a StackerTools license.

Next: allow the microphone (p. 3), then follow the testing steps on p. 8. See app screen examples on p. 19.



Official App Store listing

Scan with your phone camera, or use the official links in the online guide.

iOS / iPadOS 14.0+. Store requirements can change. Customers download and pay for their own software.

ONE APP AT A TIME

Choose. Listen. Review.

Select the **exact coin**: metal, weight, design and year range. Do not substitute a similar coin.

Pingcoin - standard test

Use the standard test. Guidance calls its control **Start Recording**; labels vary.

StackerTools - sound test

Its web screen shows **Diameter, Mass, Thickness** and **Start**. App controls may differ. Measure the actual coin; preset values are references.

1 Prepare the Omega

Follow pp. 10-11. Work in a quiet place; keep the microphone clear.

2 Capture and read the result

Start listening, sound the coin using your Omega instructions and let the app finish. Read the full result and any size or weight check.

Always also check weight, diameter, thickness and appearance. A sound match is a screening result, not an authenticity guarantee.

WINDOWS + MAC + LINUX

Use your web browser.

1 Connect and open your browser

Stay online. Use Edge or Chrome on Windows, Safari or Chrome on Mac, or a compatible browser on Linux.

2 Open one coin tester

Pingcoin: pingcoin.com/coins

StackerTools: stackertools.com/home

You do not need to install a computer app.

3 Choose a coin and allow the microphone

Select the exact coin. On its test screen, choose

Start Ping Test for Pingcoin or **Start** for

StackerTools. Select **Allow** if the browser asks for the microphone.

4 Listen and review

Follow pp. 10-11 with the microphone close enough to hear clearly. Let the test finish. Read the result; check weight, dimensions and appearance.

No computer microphone? Use a compatible external microphone or a phone/tablet. Offline website testing is not confirmed.

StackerTools' browser tester is beta; Chrome has had the most developer testing. This guide uses the browser route on Mac; StackerTools is not verified for macOS.

MEET YOUR OMEGA

Find the main parts.



1 Phone + cradle

Phone sits above the coin;
keep its microphone clear.

2 Coin placement

Choose the exact matching
coin in the app.

3 Positioning bumpers

Adjust the two bumpers using
the supplied instructions.

4 Resonator

Follow your unit's guidance
for contact with the coin rim.

Phone display is illustrative. Side controls and power ports are outside this view.

POSITION + ACTIVATE

Make your first test.

1 Set up on a stable surface

Place the phone in the cradle above the resonator. Keep the microphone uncovered and move to a quiet area.

2 Position the coin

Wein's instructions recommend suitable gloves. Place the coin under the resonator so it contacts the coin's **upper rim** as described in those instructions. Adjust the bumpers for a clear audible ring; avoid rubbing the coin's surfaces.

3 Start listening, then activate

Open the app's standard test. For the controls in Wein's instructions, slide the recessed **right-side switch toward you** for ON. The instructions show a pulsing red indicator. The **left-side manual button** produces a single pulse.

4 Read the full result

Let the app finish. Compare the sound result with the coin's actual weight, dimensions and appearance. Turn the Omega and battery pack OFF when finished.

Physical controls and positioning are based on Wein Products' supplied Quick Start. If your unit differs, follow its supplied instructions. Do not aim for one universal peak count.

POWER + PACKING

Power and pack up.

Wein's instructions describe **four alkaline AA batteries** in the rear pack and supplied cable / AC USB power. Follow the pack's battery markings and your unit's connection instructions.

The described pack's **USB** switch enables USB output; turn it **OFF** after use. Use your phone's usual charger for app setup.

Check before connecting

Confirm cable and port compatibility with Wein Products if unsure. USB-C shape alone is not enough. **Do not recharge alkaline AA batteries.**



Included case: power OFF; remove phone and coin; disconnect cables. Keep loose items off the resonator. Follow supplied packing instructions; close gently.

Check your packing list for ValuePAK accessories. Customers pay for their own software.

AWAY FROM WI-FI

Test offline first.

Both app developers describe offline coin testing. Confirm your exact coin and access level on your own device before relying on it.

1 **Set up online**

Download the app, resolve any purchase or activation code and load the exact coin.

2 **Turn Airplane Mode ON**

Also check that Wi-Fi is OFF.

3 **Close and reopen the app**

Check that the coin and testing screen still load.

4 **Try a sample test**

Follow your Omega's instructions without Internet.

5 **Restore your connection**

If the app asks to connect, resolve that before travelling.

Internet is needed for downloads and updates. Stay online for purchase or initial activation. Keep Internet connected for browser testing.

Offline data does not guarantee permanent paid access. Pingcoin purchase terms apply. StackerTools advertises no subscription for its Pocket Pinger bundle; check the terms for your purchase.

READY TO TEST

A quick check before you begin.

- ☐ My exact coin is listed.
- ☐ The app opens and has microphone access.
- ☐ Required purchase or access code is resolved.
- ☐ My device is charged or connected to power.
- ☐ I have confirmed the Omega setup and controls.
- ☐ I checked offline use if I need it.

Then try the other app

Finish one test before switching apps. Select the same exact coin in each. Use one compatible device, or repeat on another compatible device. Agreement adds a comparison, not proof of authenticity.

Optional records: save a result screenshot with item ID, date, app and selected coin. Note actual weight, diameter and thickness. Keep both app results under the same ID.

Screenshots: iPhone with Face ID uses Side + Volume Up. Android commonly uses Power + Volume Down. Other models differ; use your device maker's instructions. Records are saved manually; automatic audit logging is not established.

A LITTLE HELP

Something not working?

Cannot install?

Check Internet, storage and store compatibility. Use the official listings. Avoid unofficial download files.

Cannot hear the coin?

Check microphone permission, reduce noise and keep the microphone clear. Close another app using it. Check the chosen microphone in a browser.

A code or purchase is requested?

Free download does not mean full access. Check the developer's official options. Pocket Pinger owners may have a Bonus Pack code; buying an Omega does not establish that entitlement.

Paid on another device?

Use the store account that made the purchase and check for restoration if offered. Do not assume a purchase transfers between Apple and Android, or one code covers unlimited devices.


A non-match or disagreement?

Recheck coin, year range, contact and noise. Repeat using supplied handling instructions. Compare weight, dimensions and appearance. A non-match needs investigation; it is not a final counterfeit diagnosis.

PINGCOIN | ANDROID PHONE + TABLET

Find the coin. Read the result.

Official store references; your version may differ. Promotional text is part of the source artwork. A sound match alone does not prove authenticity.

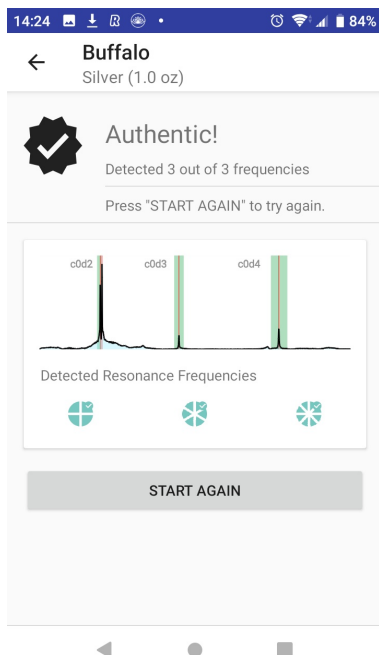

1. Choose your coin

Match metal, weight and design.
Do not substitute a similar coin.


2. Review the test

Read the completed sound
result. This reference may show
an older version.

PINGCOIN | IPHONE + IPAD


Your coin and sound result.

Official store references; your version may differ. Promotional text is part of the source artwork. A sound match alone does not prove authenticity.

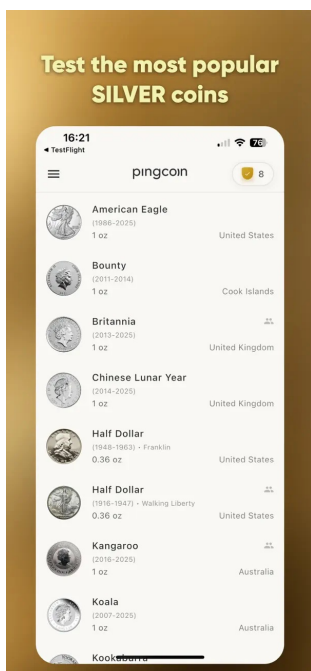

1. Find the coin type

Select the exact coin from the list.

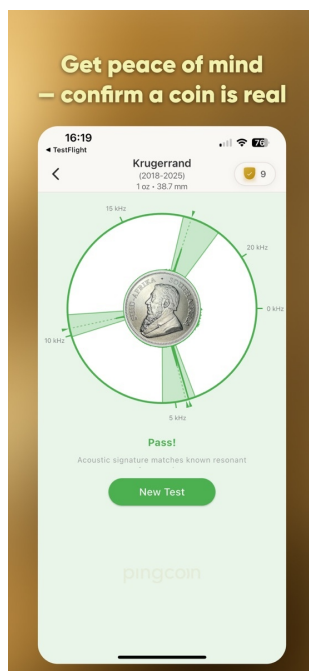


2. Read the sound result

This example shows Pass! and New Test. Read the full result before repeating.

STACKERTOOLS | ANDROID PHONE + TABLET

Find the testing controls.

Official store references; your version may differ. Promotional text is part of the source artwork. A sound match alone does not prove authenticity.


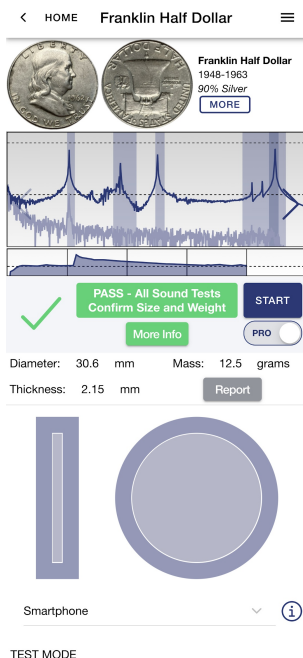


Test screen reference

Locate the coin name, Start control, sound plot and measurement fields. Measure your coin; preset values are references.



Compare the sound results.

Official store references; your version may differ. Promotional text is part of the source artwork. A sound match alone does not prove authenticity.

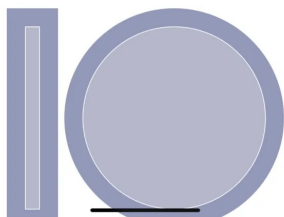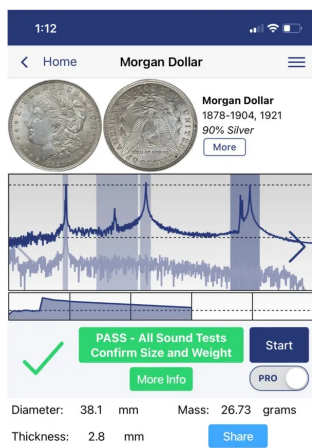

Matching sound result

The green result also asks you to confirm size and weight.

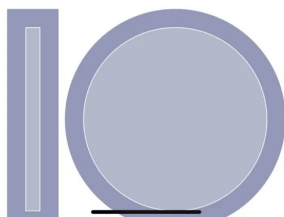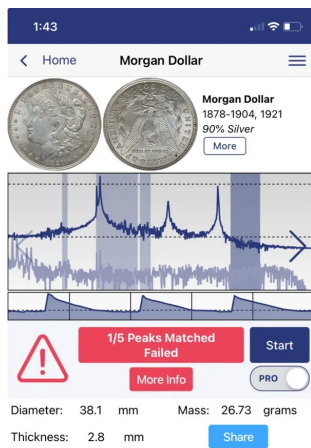

Non-matching result

Recheck selection, contact and noise. A non-match needs investigation.

MORE HELP

Keep this guide close.

For Omega setup, package contents and cables:
WeinProducts.com. For software access and purchases:
the app developer's official support.



Open the online guide

Scan for larger visuals, official app links
and the latest instructions.

[weinproductsmarketing-eng.github.io/
omega-aris-guide-public/](https://weinproductsmarketing-eng.github.io/omega-aris-guide-public/)

Official reference sources

Pingcoin: pingcoin.com/docs/faq and [/docs/how-to-use](https://pingcoin.com/docs/how-to-use).

StackerTools: stackertools.com/home and
soundmoneymetals.us.

Apple App Store and Google Play listings (QR links on pp.
4-7).

Physical setup: Wein Products' supplied Quick Start and
parts diagram.

English (US) | Edition 1.1 | October 2, 2026

Store prices, compatibility and app screens can change. Third-party apps
are not bundled licenses or implied partnerships. Follow your specific unit's
supplied instructions.